



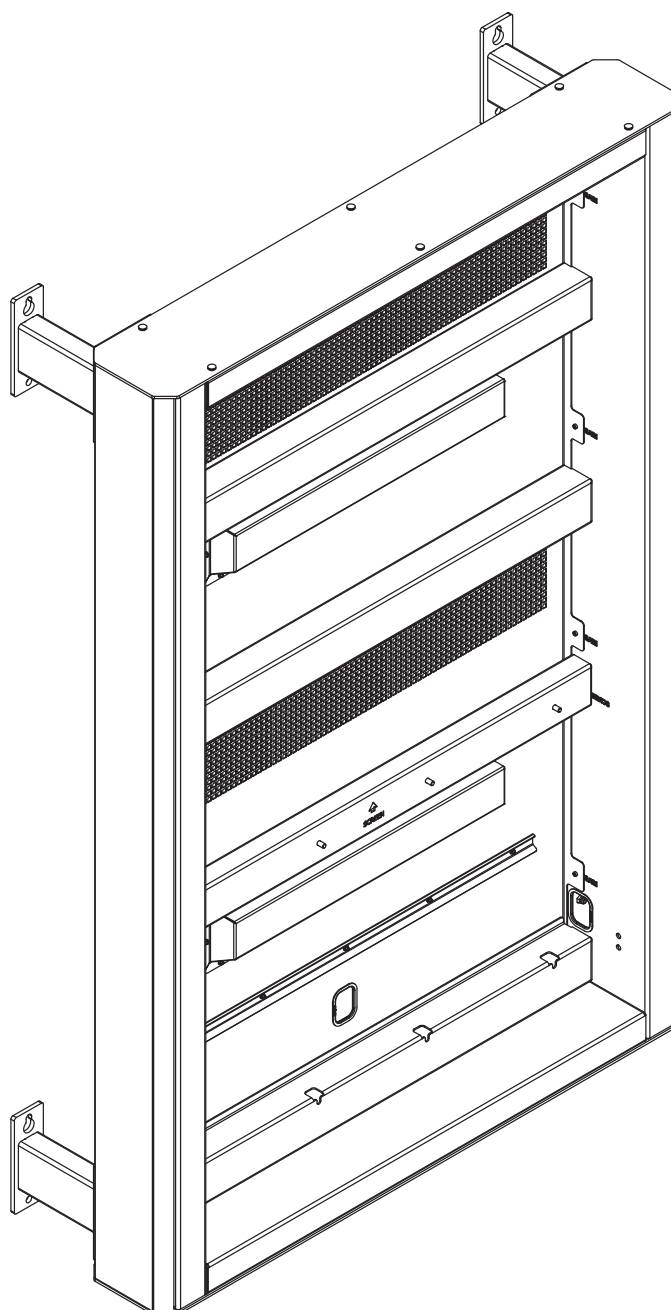

OWM110

PORTRAIT OUTDOOR KIOSK
FOR 75" Samsung OH75A



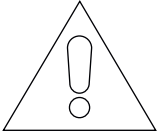

INSTALLATION MANUAL


OWM110
IM-01

WARNING

Please read this manual before starting the installation to ensure correct assembly.

The assembly should be carried out in accordance with this manual by at least two fully qualified people. The EDBAK Company shall not be liable for any injuries or damage to material or property caused by incorrect assembly. Hence please ensure that:




- during the assembly all the instructions are followed carefully. Failure to do so may result in damage to the product or property, or even personal injury;
- before assembly you must ensure that there are no power cables, or water, sewage or gas pipes in the area of the ceiling where the mount is to be fixed;
- when attaching the projector to the mount, please ensure that the screws are of the correct length and diameter. In order to ensure the correct fit, use the plastic spacers supplied. Use of the wrong screws may result in permanent product damage. Extra caution should be taken with movable parts in order to avoid crushing or pinching your hands or fingers. The movable parts are identified in this manual.

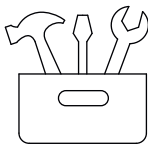


TOOL LIST


OWM110
IM-01

  TOOLS

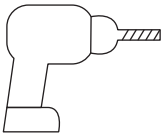		AA	1x
		BB	1x
		CC	1x
		DD	8x
	4mm	EE	1x
	5mm	FF	1x

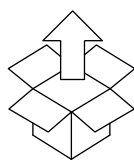

PRODUCT

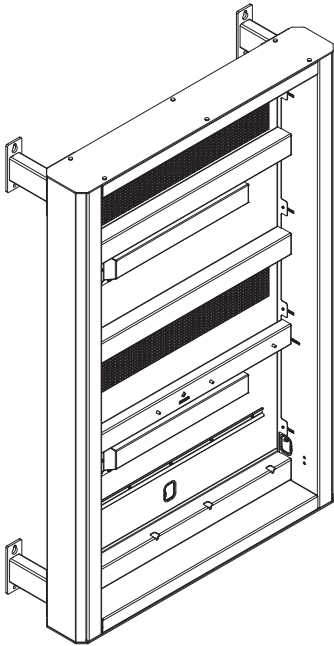

A



1x




ASSEMBLY



OWM110
IM-01

01

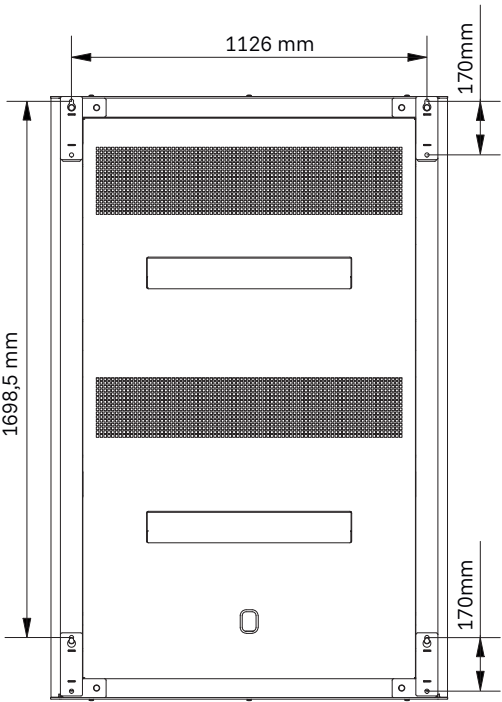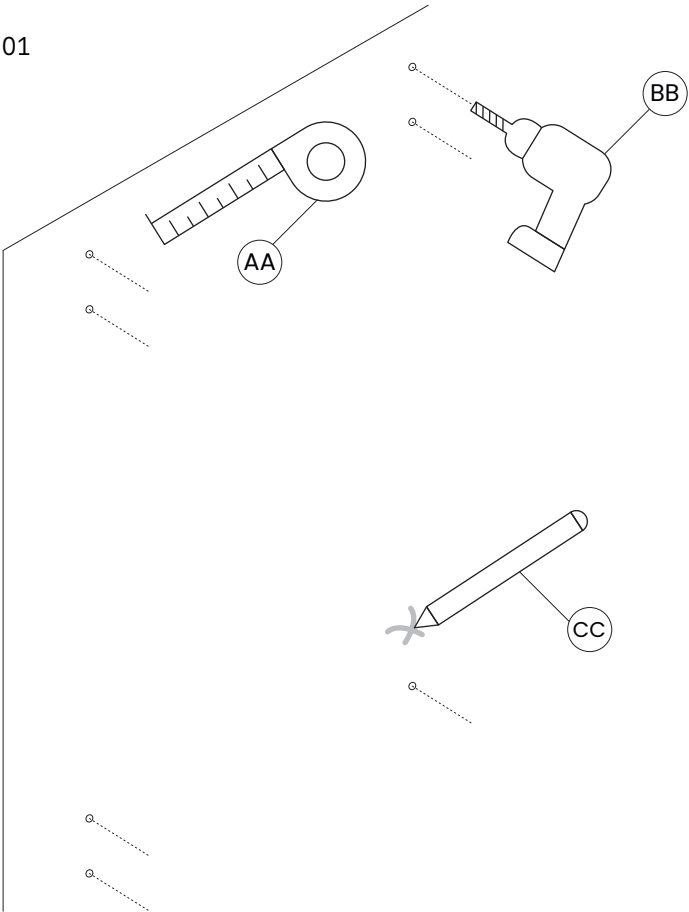

02

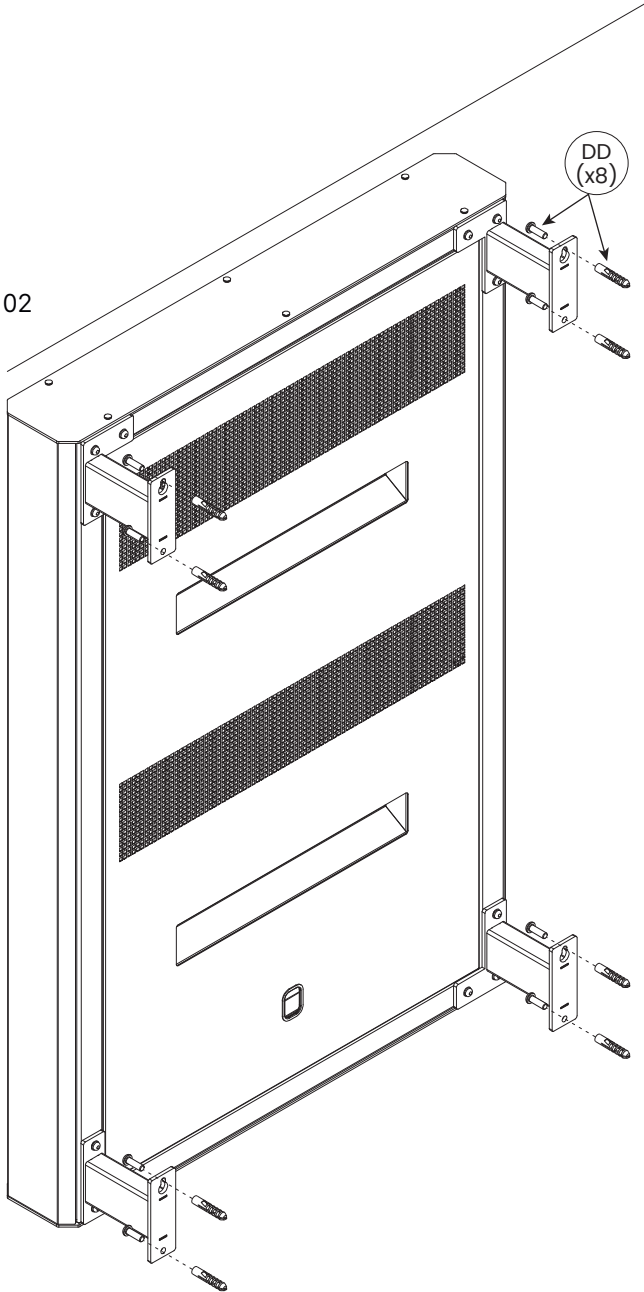


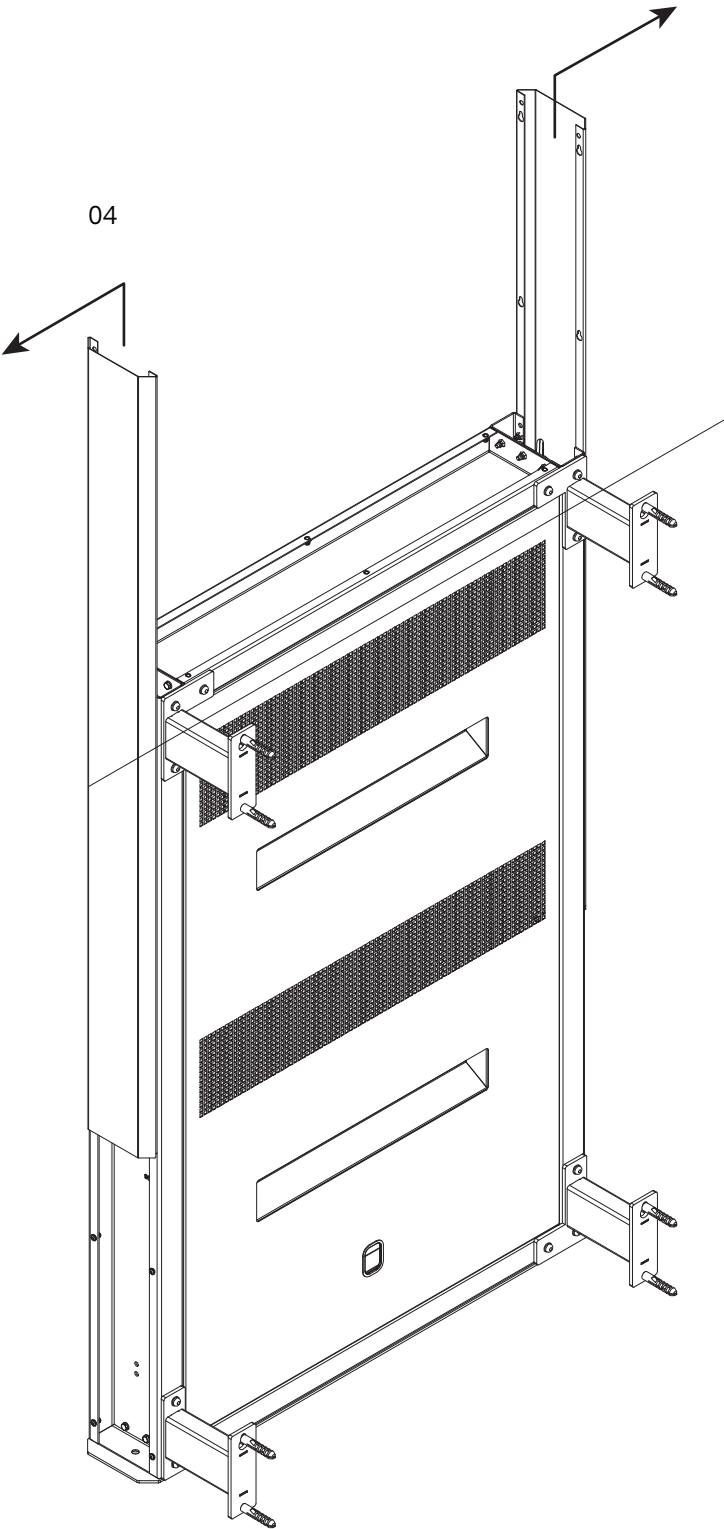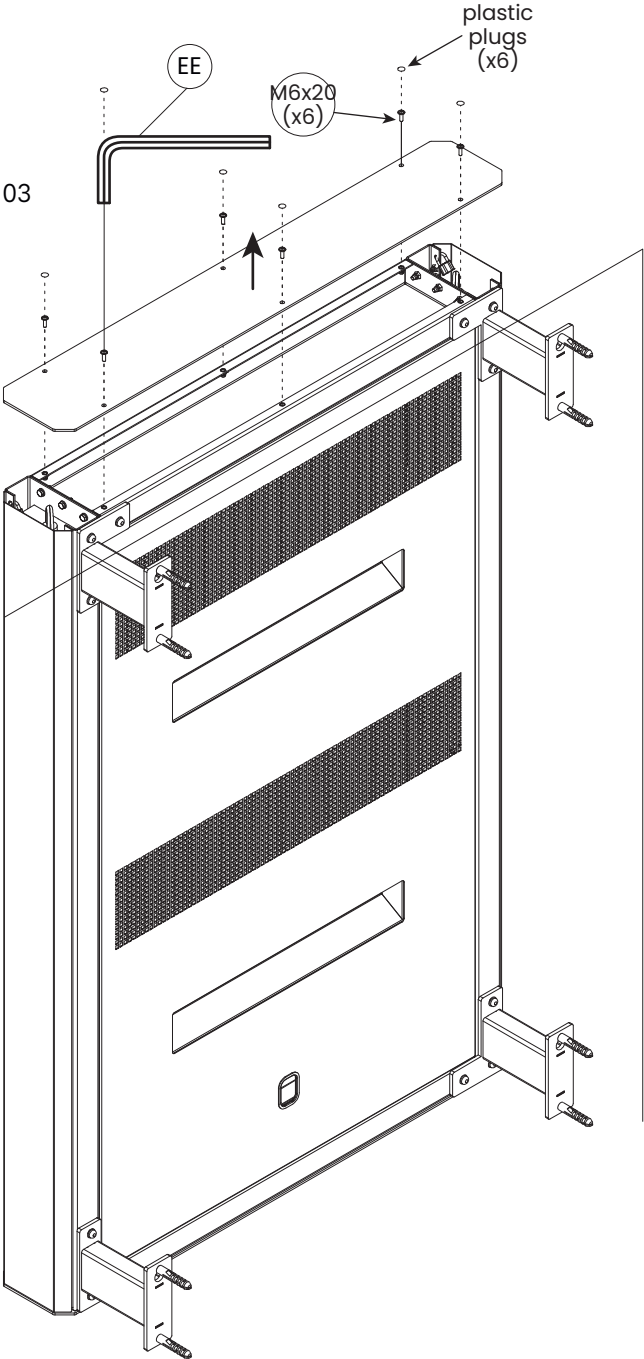



ASSEMBLY


OWM110
IM-01

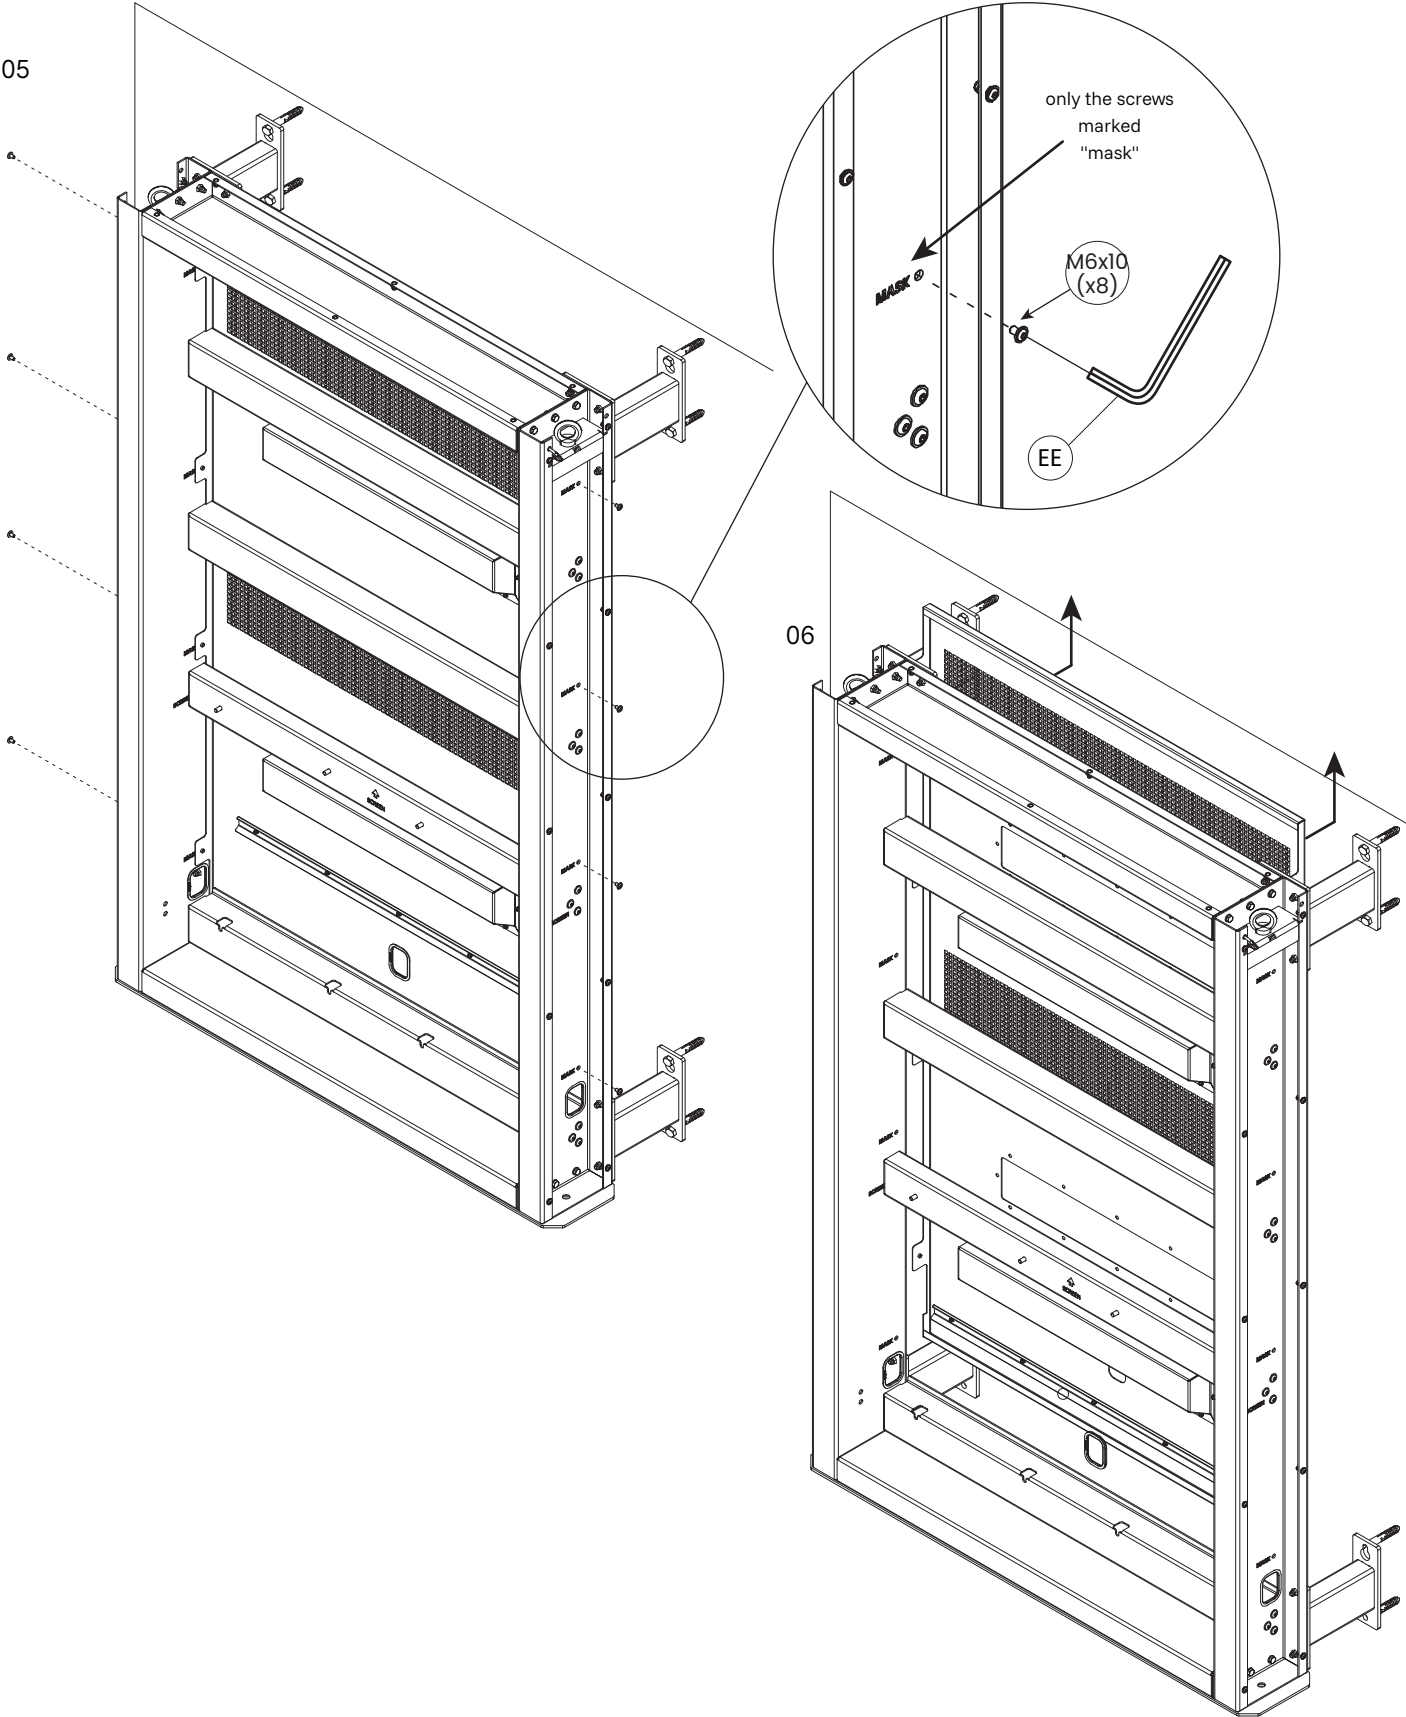



ASSEMBLY


OWM110
IM-01

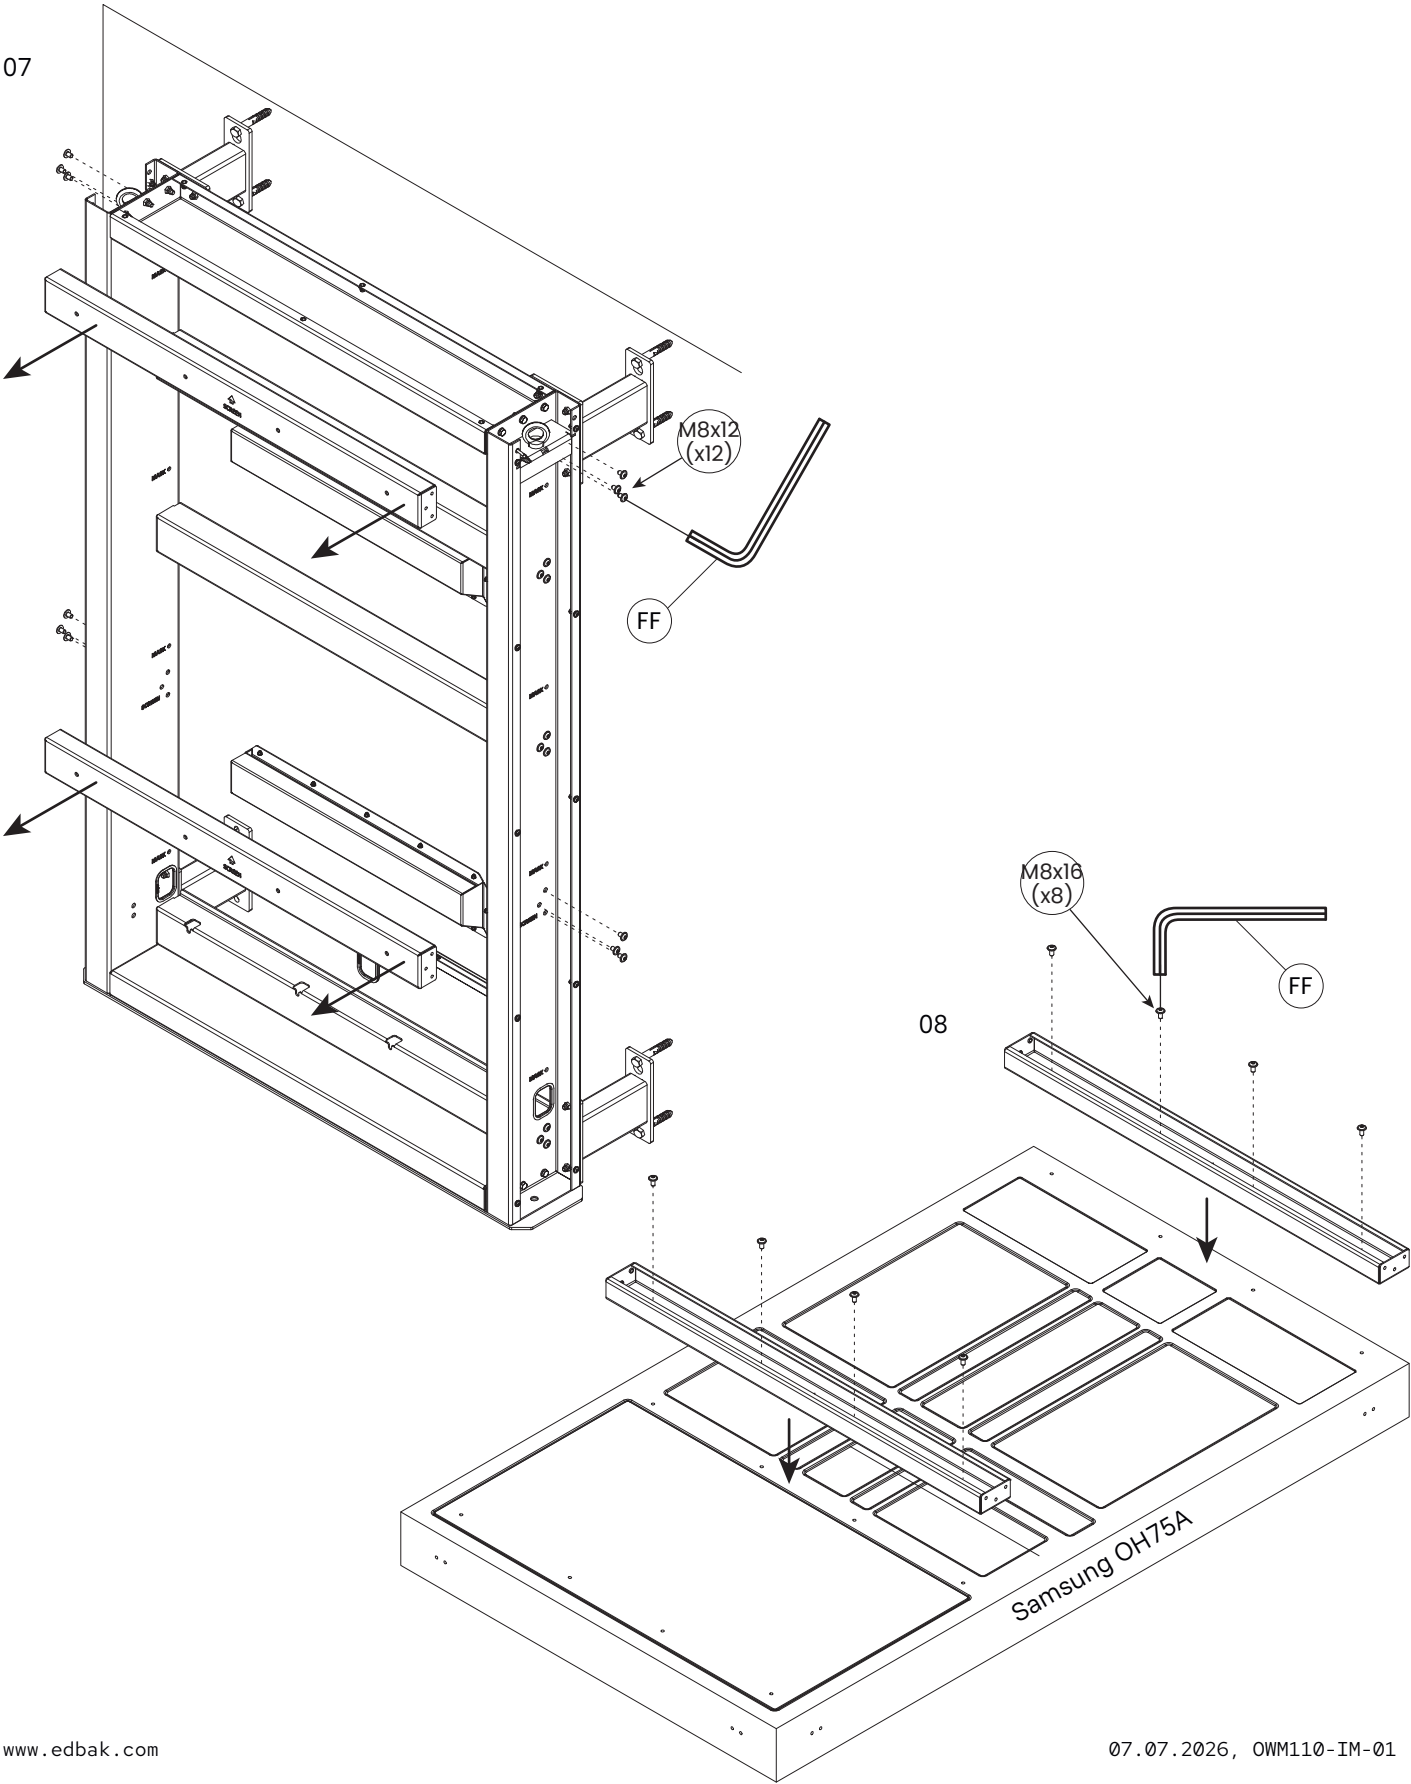




ASSEMBLY

OWM110
IM-01

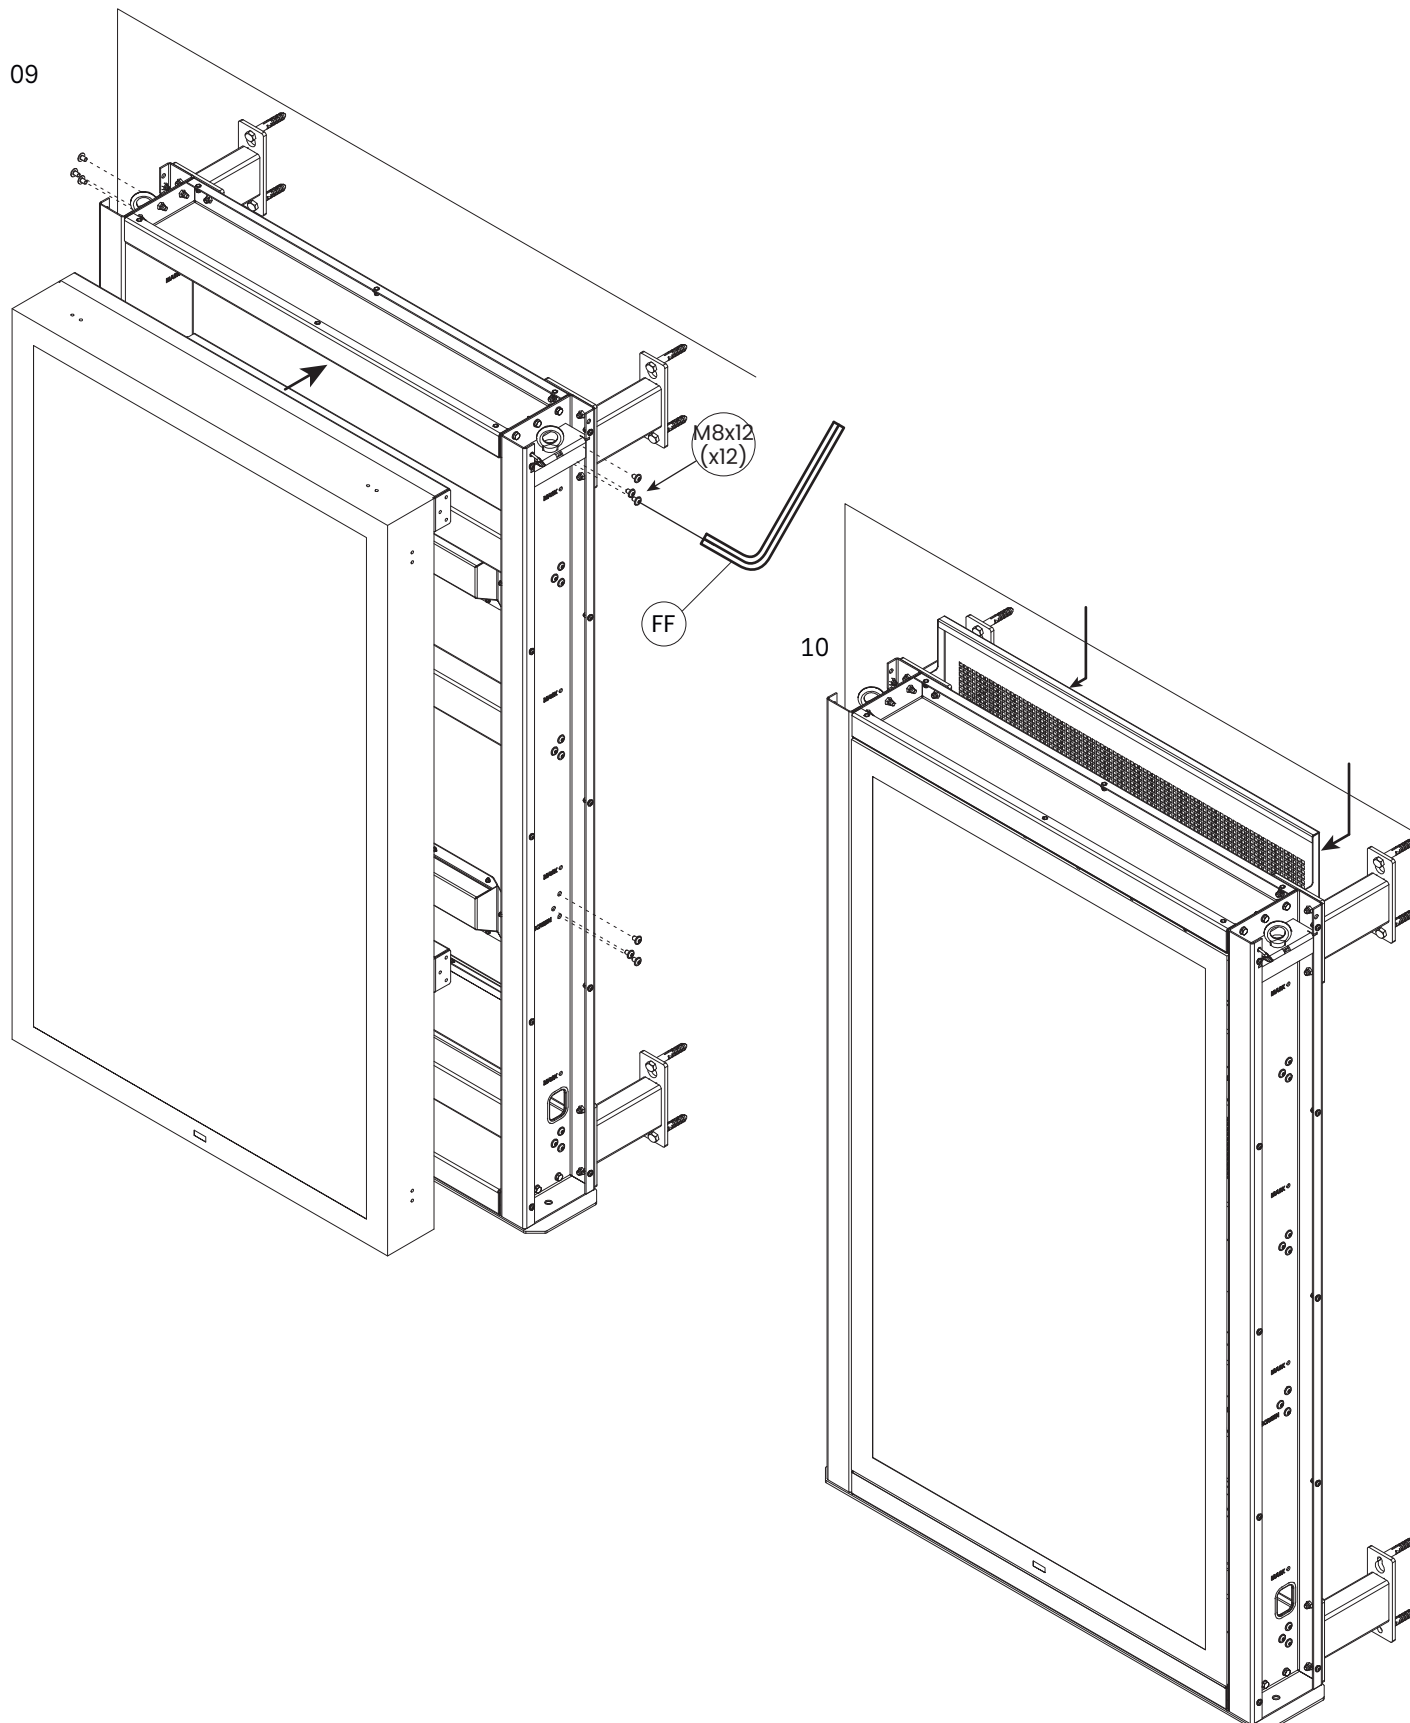

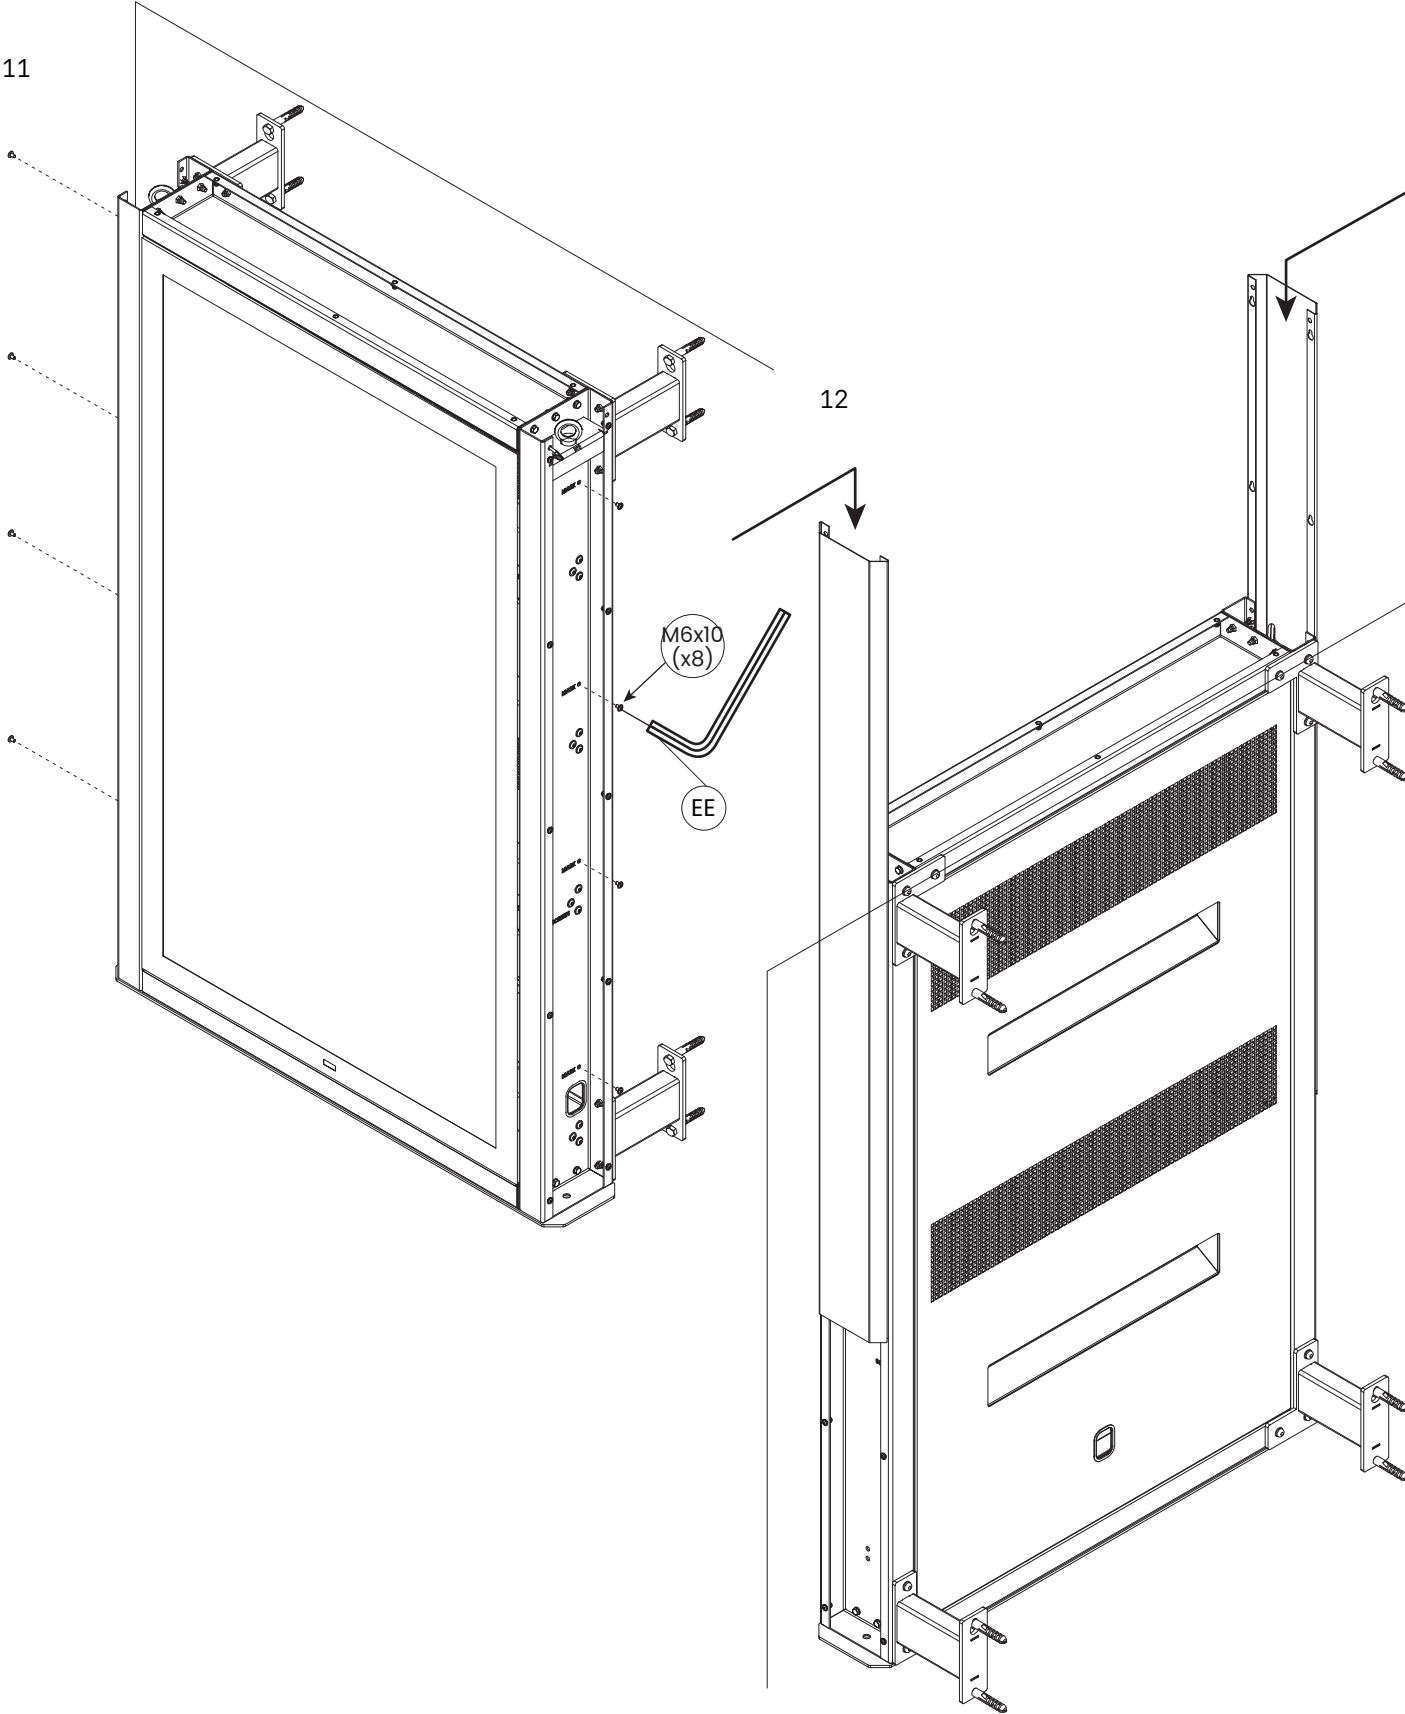



ASSEMBLY

OWM110
IM-01

